

















LIEBHERR			Wuchtgewichtstabelle		WZC 201
Tabelle			Tabelle grundrasterlich (Stoß)		FA 4264/95
HL	Pos. WR	Pos. WL	HL	Pos. WR	Pos. WL
4	118	347	4	118	347
5	118	347	5	118	347
6	118	347	6	118	347
7	118	347	7	118	347
8	118	347	8	118	347
9	118	347	9	118	347
10	118	347	10	118	347
11	118	347	11	118	347
12	118	347	12	118	347
13	118	347	13	118	347
14	118	347	14	118	347
15	118	347	15	118	347
16	118	347	16	118	347
17	118	347	17	118	347
18	118	347	18	118	347
19	118	347	19	118	347
20	118	347	20	118	347
21	118	347	21	118	347
22	118	347	22	118	347
23	118	347	23	118	347
24	118	347	24	118	347
25	118	347	25	118	347
26	118	347	26	118	347
27	118	347	27	118	347
28	118	347	28	118	347
29	118	347	29	118	347
30	118	347	30	118	347
31	118	347	31	118	347
32	118	347	32	118	347
33	118	347	33	118	347
34	118	347	34	118	347
35	118	347	35	118	347
36	118	347	36	118	347
37	118	347	37	118	347
38	118	347	38	118	347
39	118	347	39	118	347
40	118	347	40	118	347
41	118	347	41	118	347
42	118	347	42	118	347
43	118	347	43	118	347
44	118	347	44	118	347
45	118	347	45	118	347
46	118	347	46	118	347
47	118	347	47	118	347
48	118	347	48	118	347
49	118	347	49	118	347
50	118	347	50	118	347
51	118	347	51	118	347
52	118	347	52	118	347
53	118	347	53	118	347
54	118	347	54	118	347
55	118	347	55	118	347
56	118	347	56	118	347
57	118	347	57	118	347
58	118	347	58	118	347
59	118	347	59	118	347
60	118	347	60	118	347
61	118	347	61	118	347
62	118	347	62	118	347
63	118	347	63	118	347
64	118	347	64	118	347
65	118	347	65	118	347
66	118	347	66	118	347
67	118	347	67	118	347
68	118	347	68	118	347
69	118	347	69	118	347
70	118	347	70	118	347
71	118	347	71	118	347
72	118	347	72	118	347
73	118	347	73	118	347
74	118	347	74	118	347
75	118	347	75	118	347
76	118	347	76	118	347
77	118	347	77	118	347
78	118	347	78	118	347
79	118	347	79	118	347
80	118	347	80	118	347
81	118	347	81	118	347
82	118	347	82	118	347
83	118	347	83	118	347
84	118	347	84	118	347
85	118	347	85	118	347
86	118	347	86	118	347
87	118	347	87	118	347
88	118	347	88	118	347
89	118	347	89	118	347
90	118	347	90	118	347
91	118	347	91	118	347
92	118	347	92	118	347
93	118	347	93	118	347
94	118	347	94	118	347
95	118	347	95	118	347
96	118	347	96	118	347
97	118	347	97	118	347
98	118	347	98	118	347
99	118	347	99	118	347
100	118	347	100	118	347

HL = Halshöhe
 Pos. WR = Wuchtgewicht rechts
 Pos. WL = Wuchtgewicht links
 pos. WR = Wuchtgewicht rechts
 pos. WL = Wuchtgewicht links

